


Sealer GP - Wipe-on, wipe-off sealer

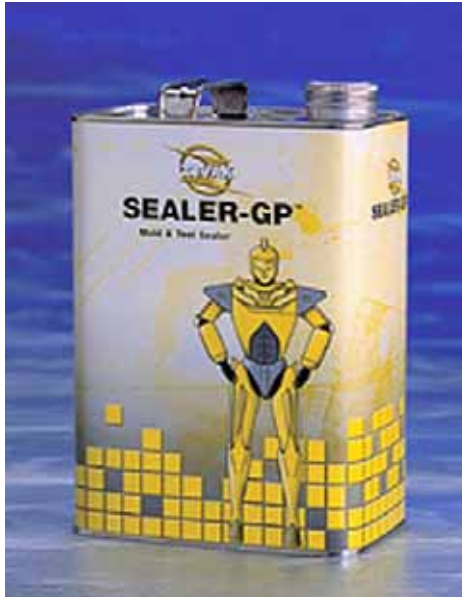

- 1) Remove all trace of wax, polish, or oil using ZYVAX Surface Cleaner, followed by WaterClean for complete contaminant removal.
- 2) Apply SEALER GP to a small area of the mould (0.2 sq. m.) using a clean paper towel or lint free cloth, slightly over-lapping the previously coated area to ensure complete coverage.
- 3) While still wet, gently wipe dry using a separate clean paper towel or lint free cloth.
- 4) Allow a 15-minute cure time between coats.
- 5) Apply a second coat of SEALER GP in the same way.
N.B. This is the final coat on metal moulds; apply 3 coats to glass; 4 coats to polyester gelcoat and epoxy, and green or patched moulds after a minimum of 24 hours curing; and a minimum of 6 coats to epoxy tooling block, Bondo, or oxidized gelcoat moulds.
- 6) Allow at least 30 minutes to cure, apply release agent.

DOT HAZARD CLASSIFICATION: Flammable Liquid 3
DOT I.D. NUMBER: UN 1866

Importers and
Distributors:



3 Civil Place, Albany
Ph: 09 4761 377

www.fibreglass-supplies.com